

How to setup PureVPN on Huawei router

If you want to set up a VPN with PPTP on your Huawei router, follow this step-by-step guide.


Things to Consider:

Before you begin, please make sure that:

- You have a working internet connection
- VPN Supported Router.
- Own a premium PureVPN account (If you do not already own one, you can buy a subscription from [here](#))

1 This image shows that how your VPN setup will look like:

- 1a. Shows an Ethernet connect from router to computer.
- 1b. Shows wireless connection from router to computer.

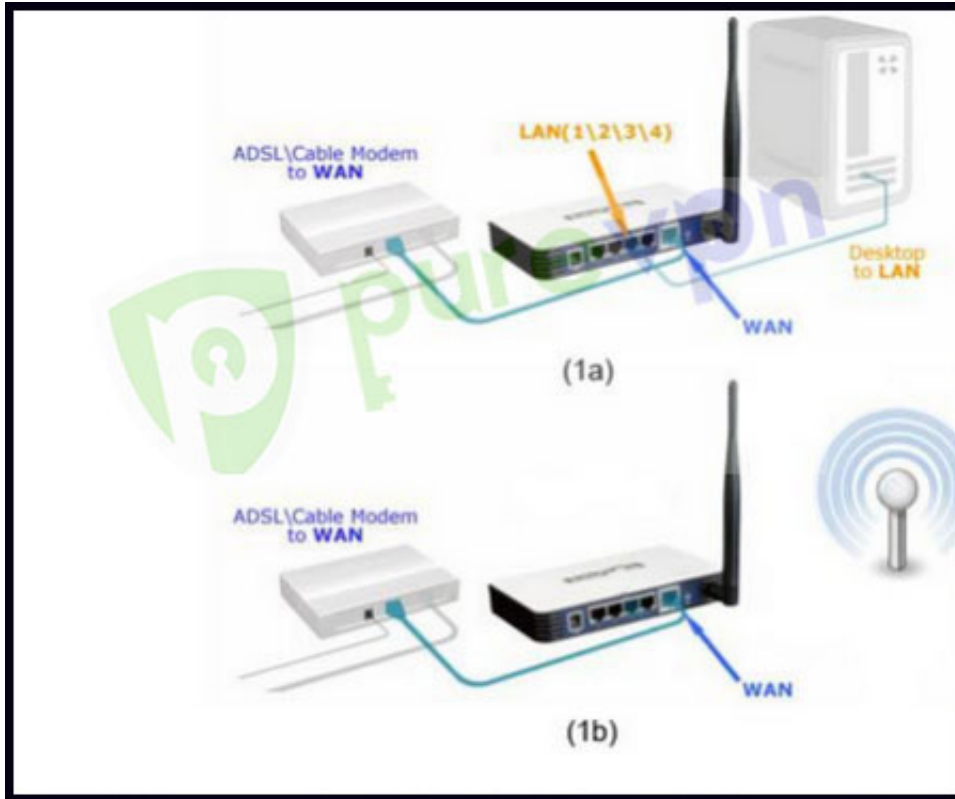

2 Browse to your router's administration panel.

3 Open VPN on the left-side menu, and expand the PPTP section

4 Enter this configuration:

- Enable PPTP LAC:Checked
- LNS address: Enter a PureVPN server address. You can find our server addresses here
- Host name: Anything you want, for ex:- PureVPN or PureVPN PPTP etc.
- Tunnel password: Leave empty
- Hello Interval (seconds): 60
- PPP username: PureVPN username
- PPP password: PureVPN password
- Connection mode: Auto

Network Security

Internet Services

VPN

Forwarding

PPTP

What's this?

PPTP tunnel status:

Disconnected

EnablePPTP LAC:

☒

LNS address:

PureVPN Server Address

Host name:

PureVPN

Tunnel password:

Hello interval (seconds):

60

[10 – 3600]

PPP username:

PureVPN Username

PPP password:

PureVPN Password

Connection mode:

Auto

Save

5 Click Save.